



# HP Pavilion dv5000 RTC Battery Replacement

Replace the RTC battery so the system clock is accurate.

Written By: Farid Khoshnevisan



## INTRODUCTION

How to gain access to the RTC Battery and replace it.

---




### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-

## Step 1 — Battery



 Turn off down the computer, and unplug the computer from all external power sources.

- Shut the screen, and lay the computer face-down on a flat, sturdy surface. Orient the computer to match the image.
- Locate the battery release switch, as indicated in the image. Sliding this switch from right to left will release the battery.
- Remove the battery.

## Step 2 — RAM Cover



- Remove the two 5.0mm screws securing the right side of the RAM cover to the computer frame.
- Lift the right side of the RAM cover to remove.



## Step 3 — Wifi Card




- The wifi card is connected to the computer with the two antenna lead wires.
- ⓘ Note where the white AUX wire and the black MAIN wire connect to the wifi card before disconnecting.

## Step 4




- Disconnect the antenna leads from the wifi card by lifting the gold ends of the wires off the prongs on the wifi card.
- The white wire connects to the AUX terminal.
- The black wire connects to the MAIN terminal.

## Step 5

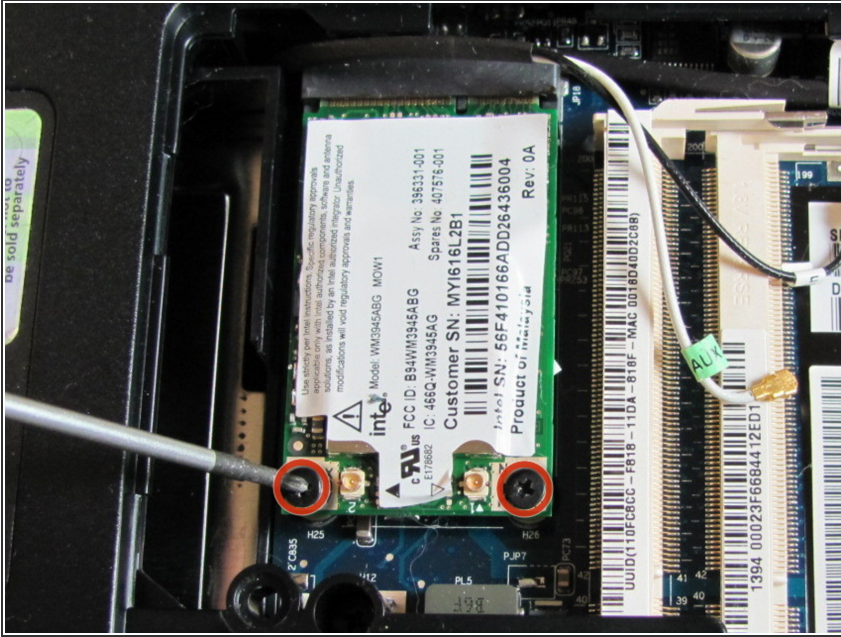

- Remove the two 6.0mm screws securing the wifi card to the computer.


## Step 6

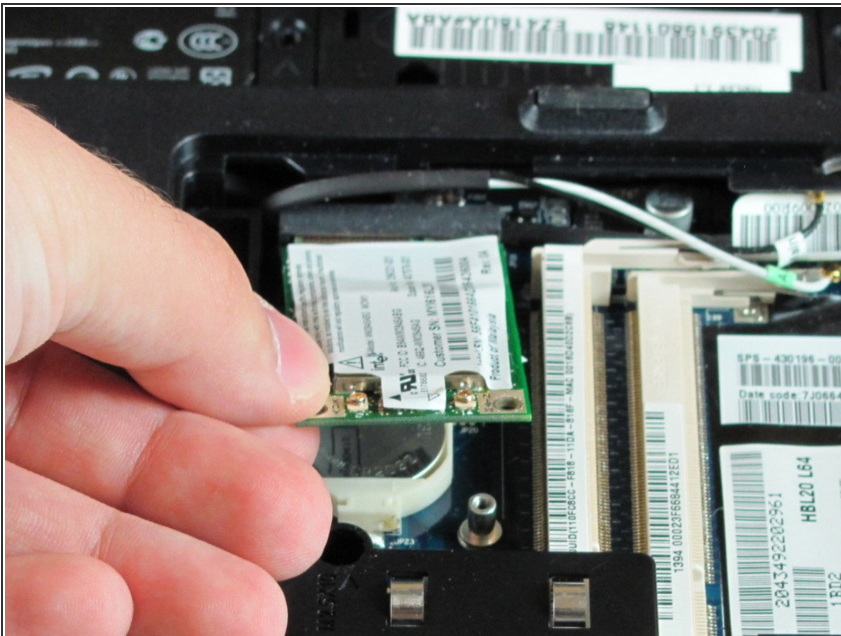

- Remove the wifi card.



## Step 7 — RTC Battery

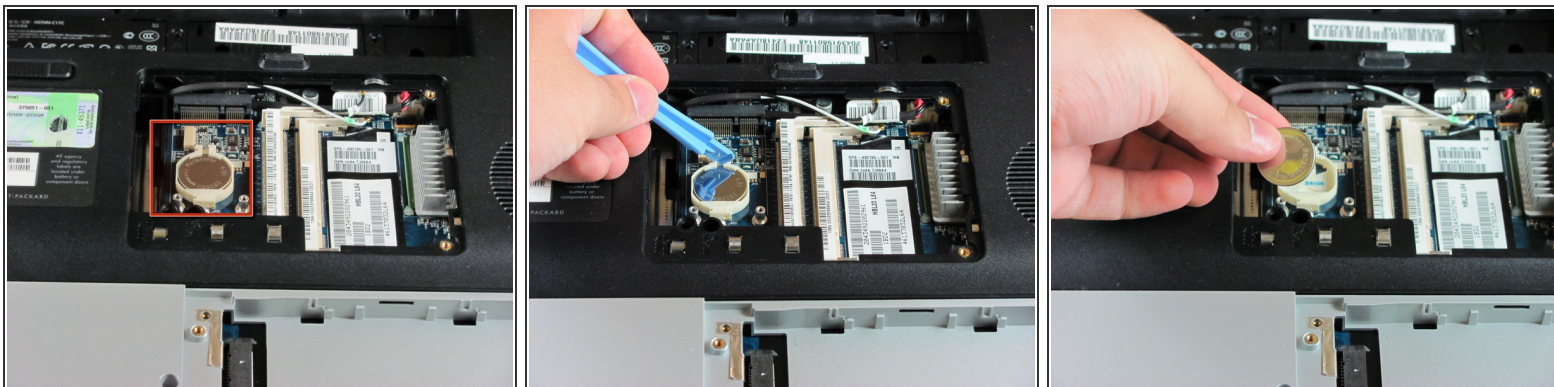

- Remove the RTC Battery from the battery holder located under where the PCI module usually is.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-19 12:48:15 PM.